




FLEXware MATE3 Mounting Bracket (FW-MB3)

This document contains instructions for installing the MATE3 and FW-MB3 to an OutBack Power FLEXware assembly, either a FLEXware 1000 or a FLEXware 500 AC Enclosure (shown).

Parts

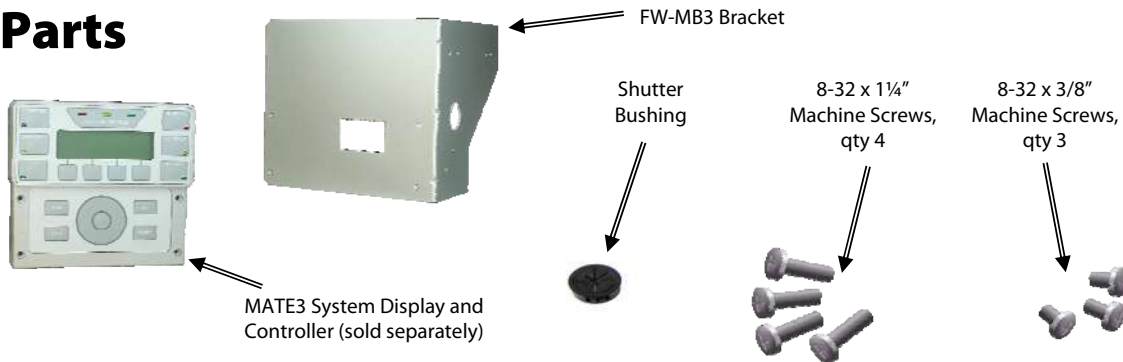

Instructions



1. In the FLEXware assembly (left), remove the knockout from the chosen opening for installation of the FW-MB3.
2. Place the FW-MB3 bracket on the side of the FLEXware assembly. Align the bracket's threaded inserts with the two matching holes above and below the FLEXware opening.
3. The FW-MB3 has a third threaded insert (above right). The FLEXware may or may not have a counterpart hole, depending on when it was made. If no hole is present, it must be drilled. Using the FW-MB3 as a template, mark the hole.
4. Remove the FW-MB3 and drill the hole in the FLEXware. This hole should be 0.18" diameter or larger.




INSTRUCTIONS CONTINUED ON NEXT PAGE


CONTINUED FROM PREVIOUS PAGE



5. Place the MATE3 against the FW-MB3. Align the four mounting holes on the MATE3 with the FW-MB3's four pre-threaded inserts.
6. Insert one 8-32 x 1 1/4" screw in each of the the MATE3's mounting holes. Turn each screw until it is seated in the FW-MB3's inserts. Tighten firmly with a Phillips screwdriver.

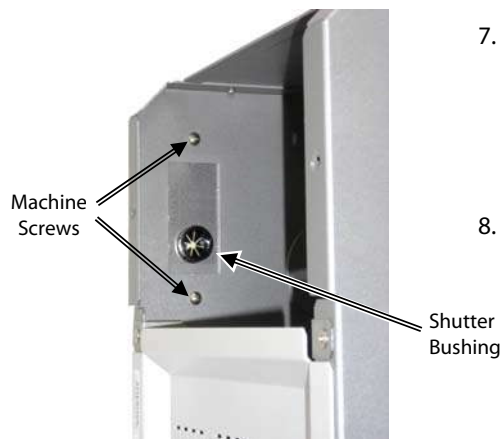

7. Line up the FW-MB3 with the opening. From **inside** the enclosure, secure the FW-MB3 with three 8-32 x 3/8" machine screws. Tighten firmly with a Phillips screwdriver.
NOTE: Screws will meet some resistance when being tightened into the FW-MB3.
8. From **outside** the enclosure, push the shutter bushing into the hole in the side of the FW-MB3 bracket until it seats.

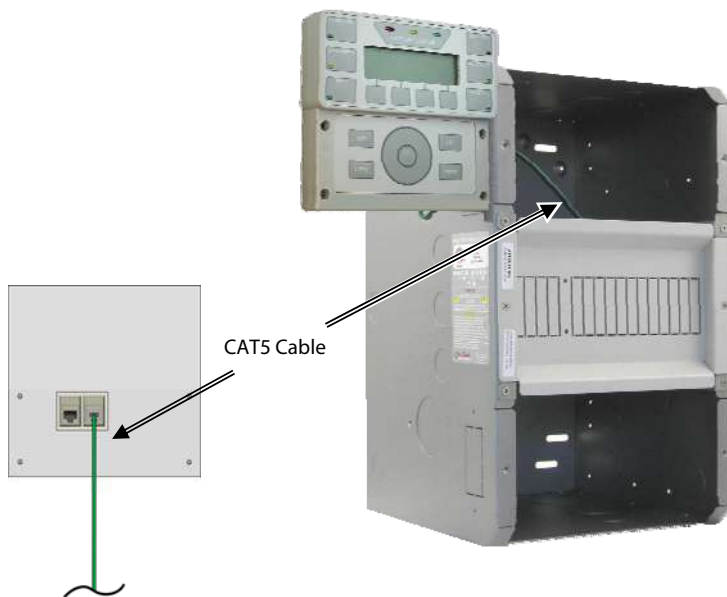

9. Plug the CAT5 cable into the back of the MATE3. Follow the instructions shown in the *MATE3 Owner's Manual*.

The MATE3 is now attached to the FLEware assembly and ready to be used.

900-0120-01-00 REV A



Worldwide Corporate Offices

Headquarter Germany

Hansastraße 8
D-91126 Schwabach
Tel: +49 9122 79889 0
Fax: +49 9122 79889 21
Mail: info@alpha-outback-energy.com

Eastern Europe

ee@alpha-outback-energy.com

Middle East

me@alpha-outback-energy.com

France and Benelux

fbnl@alpha-outback-energy.com

Spain

spain@alpha-outback-energy.com

Alpha and Outback Energy GmbH reserves the right to make changes to the products and information contained in this document without notice. Copyright © 2020 Alpha and Outback Energy GmbH. All Rights reserved.

For more information please visit www.alpha-outback-energy.com