



FLEXware Conduit Adapters

Integration Hardware and Enclosure



Features:

- Required for FW500 and FW1000 systems, not used with FW250 systems
- One FW-ACA and DCA required per FXR series inverter/charger
- Includes mounting hardware

FLEXware Conduit Adapters Specifications

07/2020

Model	Description	Includes
FW-ACA	Adapter for AC end of FXR series inverter/charger	FW-ACA and mounting hardware
DCA	Adapter for DC end of FXR series inverter/charger	DCA, bushing and mounting hardware

Preliminary specifications are subject to change.

980-0059-01-00 REV A



Worldwide Corporate Offices

Headquarter Germany

Hansastraße 8
D-91126 Schwabach
Tel: +49 9122 79889 0
Fax: +49 9122 79889 21
Mail: info@alpha-outback-energy.com

Eastern Europe

ee@alpha-outback-energy.com

France and Benelux

fbnl@alpha-outback-energy.com

Russia

russia@alpha-outback-energy.com

Middle East

me@alpha-outback-energy.com

Spain

spain@alpha-outback-energy.com

Africa

africa@alpha-outback-energy.com

Alpha and Outback Energy GmbH reserves the right to make changes to the products and information contained in this document without notice. Copyright © 2020 Alpha and Outback Energy GmbH. All Rights reserved.

For more information please visit www.alpha-outback-energy.com