





# AOESS48V-LFP4100


## BRACKET INSTALLATION

1. Dismantle the 2 tabs on the battery.

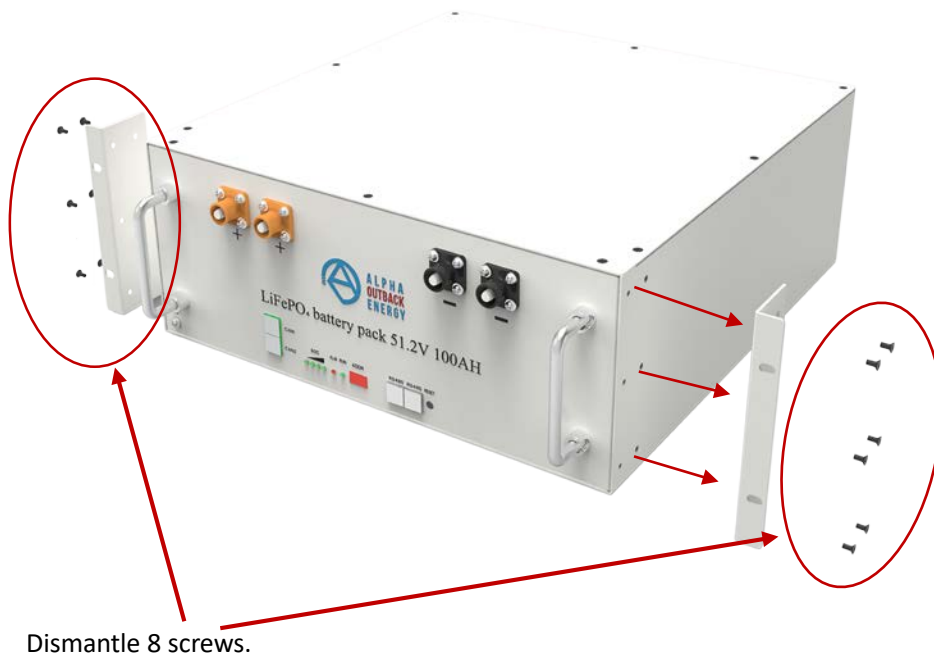


2. Set the battery into 2 pcs Bracket from front and back

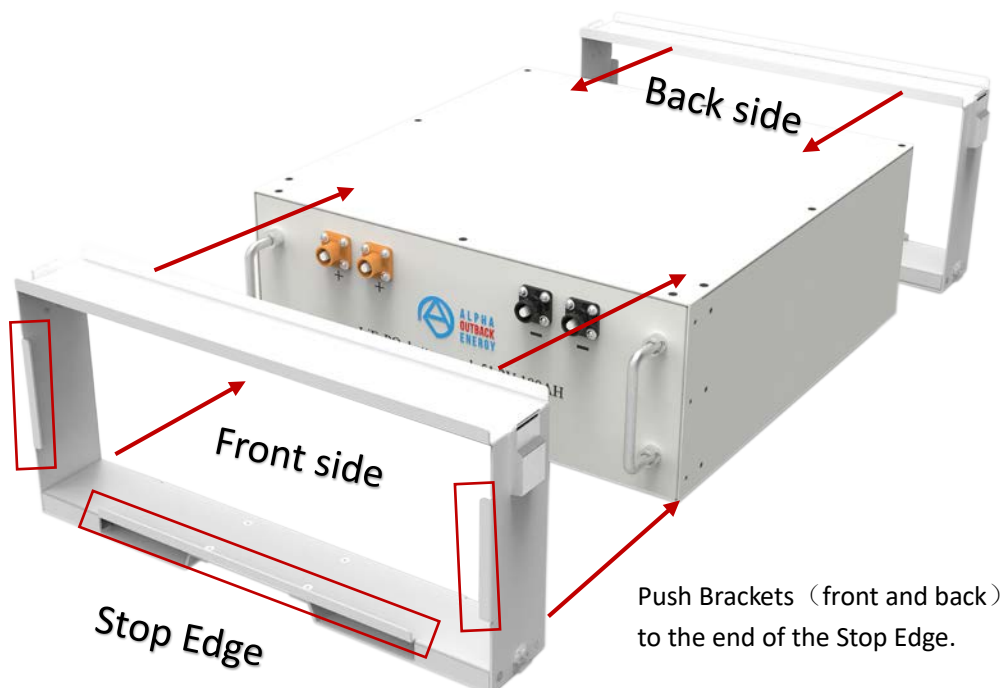

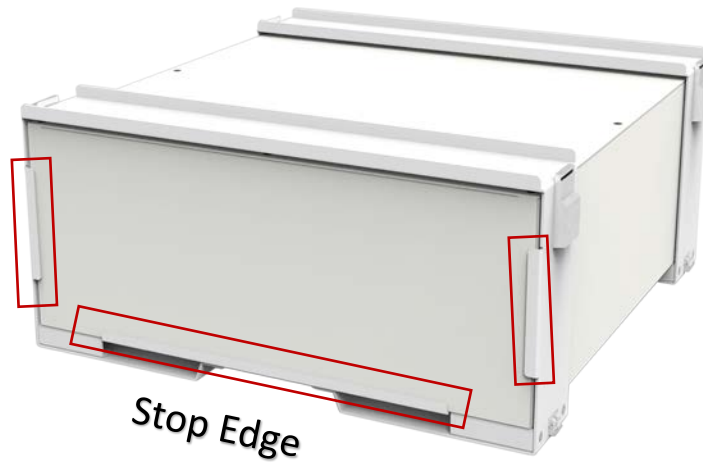

- 3. One battery plus another battery

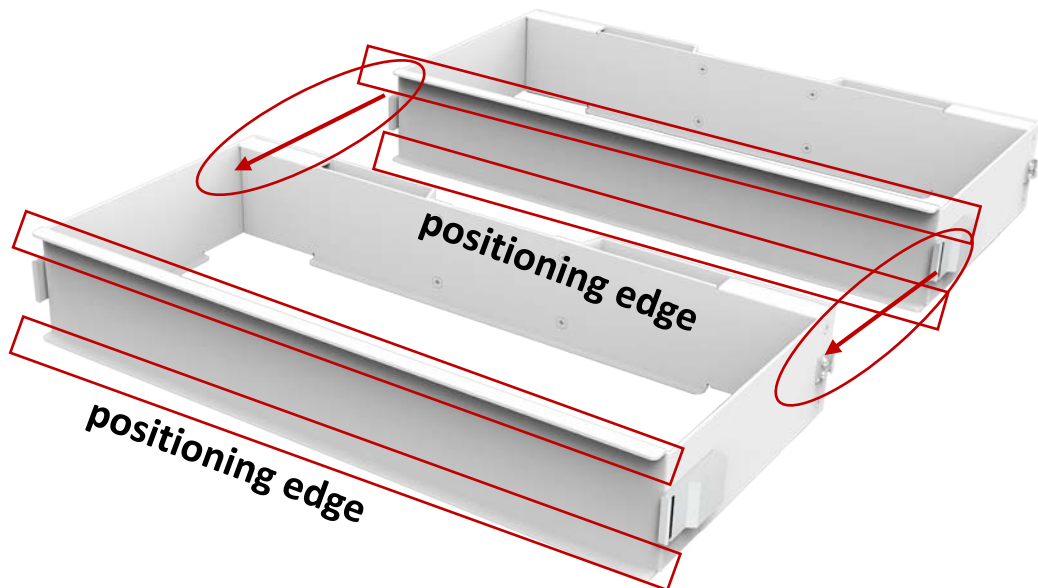



The bottom of the bracket is clamped with the positioning edge. Stack the batteries together.  
And hasp the 4 agraffes together.

4. Maximum 4 batteries can be atwart stacked



#### Worldwide Corporate Offices

##### Headquarter Germany

Hansastraße 8  
D-91126 Schwabach  
Tel: +49 9122 79889 0  
Fax: +49 9122 79889 21  
Mail: [info@alpha-outback-energy.com](mailto:info@alpha-outback-energy.com)

##### Eastern Europe

[ee@alpha-outback-energy.com](mailto:ee@alpha-outback-energy.com)

##### Middle East

[me@alpha-outback-energy.com](mailto:me@alpha-outback-energy.com)

##### France and Benelux

[fbnl@alpha-outback-energy.com](mailto:fbnl@alpha-outback-energy.com)

##### Spain

[spain@alpha-outback-energy.com](mailto:spain@alpha-outback-energy.com)

##### Africa

[africa@alpha-outback-energy.com](mailto:africa@alpha-outback-energy.com)